 




WOODSTARTER

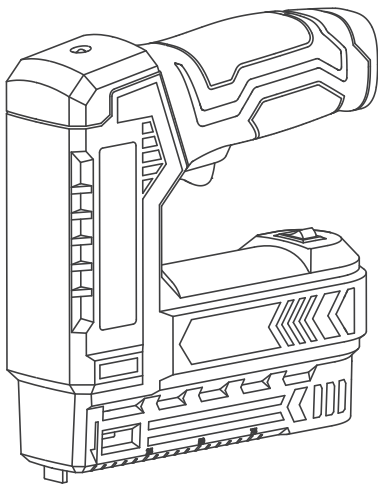

2 in 1 Cordless Nailer Gun

CBN50

USER MANUAL V 1.0

*Please read carefully before use. Please keep it for future reference.

Content

Safety Precautions	01
Specification	04
Part Description	05
Operation	06
Maintance	08
Trouble Shooting	09
Warranty Information	10

Safety Precautions

A) Work Area Safety

1. **Maintain a Clean and Well-Lit Workspace:** Keep your work area tidy and adequately illuminated to prevent accidents.
2. **Avoid Operating in Explosive Environments:** Do not use power tools around flammable liquids, gases, or dust. Sparks from power tools can ignite these substances.
3. **Keep Bystanders and Children at a Safe Distance:** Ensure that children and bystanders are away from the work area while operating power tools to prevent distractions that could lead to loss of control.

B) Electrical Safety

1. **Protect from Moisture:** Keep power tools dry and avoid using them in rain or wet conditions. Water exposure increases the risk of electric shock.

C) Personal Safety

1. **Stay Alert:** Pay attention and follow instructions when using power tools. Avoid operating tools when tired or under the influence of drugs, alcohol, or medications to prevent serious injuries.
2. **Wear Protective Equipment:** Always use eye protection. Depending on the task, consider using dust masks, non-slip safety boots, helmets, or hearing protection to minimize personal injury.
3. **Prevent Accidental Start-Up:** Ensure the switch is off before connecting to power or handling the tool. Accidental activation can lead to accidents.

4. **Maintain Proper Posture:** Do not overreach. Keep a stable stance to maintain better control of the tool in unexpected situations.
5. **Dress Appropriately:** Avoid loose clothing, jewelry, and keep hair secured and away from moving parts to prevent entanglement.
6. **Use Dust Collection Systems:** If available, connect dust extraction and collection devices to reduce dust-related hazards.

D) Power Tool Use and Care

1. **Use Appropriately:** Select the right power tool for your specific application to ensure safety and efficiency.
2. **Ensure Functionality:** Do not use the tool if the switch does not operate correctly. Tools that cannot be controlled via the switch are hazardous and need repair.
3. **Disconnect Before Maintenance:** Always unplug the tool or remove the battery before making adjustments, changing accessories, or storing it to prevent accidental start-up.
4. **Safe Storage:** Keep idle tools out of children's reach and ensure that only trained individuals operate them to avoid accidents.
5. **Regular Maintenance:** Inspect tools and accessories for alignment, damage, or wear. Repair any issues before use to prevent accidents caused by malfunctioning tools.

E) Service and Warnings

1. **Professional Servicing:** Have tools serviced by qualified professionals using only original replacement parts to maintain safety standards.

2. **Handle with Care:** Assume all tools contain fasteners. Mishandling can cause unexpected firing and personal injury.
3. **Keep Handles Clean and Dry:** Ensure handles are free from oil, grease, and moisture for secure handling and control.
4. **Avoid Damaged Tools and Batteries:** Do not use tools or batteries that are damaged or modified, as they may behave unpredictably, posing risks of fire or injury.
Temperature Precautions: Do not expose tools or batteries to fire or temperatures above 265°F (130°C) to prevent explosions.
5. **Battery Pack Handling:** Only manufacturers or authorized service agents should modify battery packs. Do not attempt repairs yourself.
6. **Proper Tool Placement:** Ensure the tool is firmly against the workpiece before activation to prevent fasteners from deflecting away.
7. **Do Not Open Battery Packs:** Opening battery packs can be dangerous and should be avoided.
Maintain the Charger: Keep the charger clean and free from dust to reduce the risk of electric shock.
8. **Pre-Use Inspection:** Always check the charger and power tool for faults before use. Do not operate if any issues are detected.

F) Battery Maintenance Tips


1. **Charge Before Emptying:** Recharge the battery before it is completely drained and stop using the tool when power is low.

2. **Avoid Overcharging:** Do not charge the battery once it is fully charged to extend its lifespan.
Charge in Suitable Temperatures: Only charge batteries within the temperature range of 0°C to 45°C.
3. **Long-Term Storage:** If you won't use the power tool for an extended period, charge the battery every three months to maintain its condition.

Specification

Stapling Speed	50/min
Staple Length	1/4-3/8 inches
Nailer Length	2/8-3/8 inches
Battery Capacity	2000mAh
Battery Type	Lithium Battery
Charger Input	100-240V 50/60Hz
Charger Output	DC 5V 600mA /0.6A
Charging Period	3-5 Hours

 Part Description

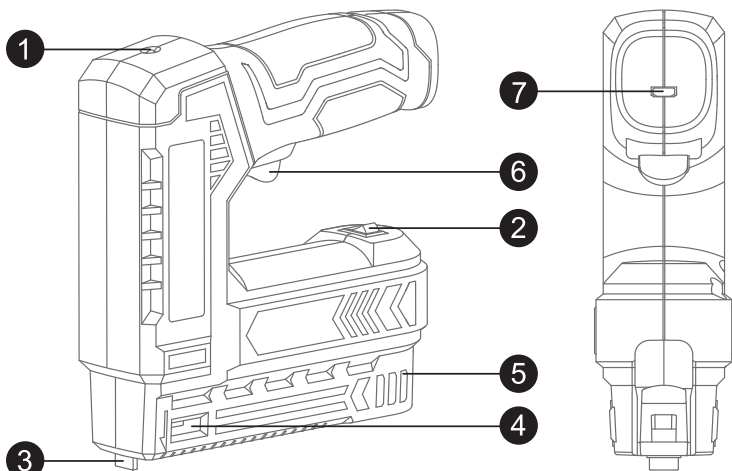

1 Battery Gauge

2 On-off

3 Workpiece Contact Bracket

4 Staple Exit Indicator

5 Magazine

6 Trigger

7 Battery Bay

Operation

DRIVING A STAPLE OR NAIL

1. Dual-Step Safety Mechanism

- The Safety Striker System operates through a two-step process, ensuring that a staple or nail is fired only when the safety striker pin is pressed against the material to be fastened.

2. Proper Tool Handling

 
 
 
- **Secure Grip:** Firmly hold the tool's handle to maintain control during operation.
- **Tool Positioning:** Position the nose of the tool flat against the workpiece at a 90° angle to ensure accurate fastening.

3. Activating the Safety Striker Pin

- **Press the Safety Striker Pin:** Depress the safety striker pin against the workpiece you intend to fasten. This action must be completed before pulling the switch trigger.
- **Essential Requirement:** The safety striker pin must be fully depressed to activate the firing mechanism.

4. Pre-Operation Check


- **Power Switch:** Before operating, ensure that the power ON/OFF switch located on the back of the staple gun is set to ON.

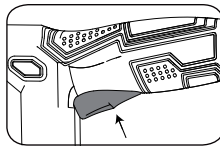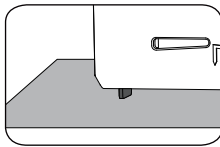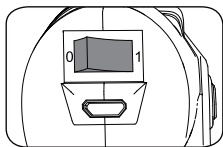

STAPLE LOADING

1. Pinch the latch
2. Pull out the magazine
3. Put staples inside magazine channel

 PICTURE A

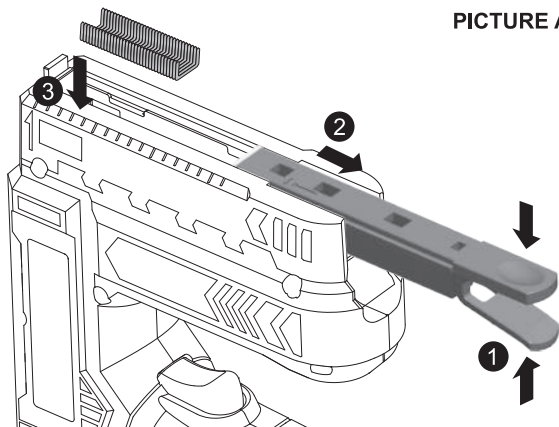


Warnings:

1. Loading Staples: Ensure the On-Off switch is in the off-position (“O”) during staple loading to prevent serious injuries.
2. Staple Orientation: Staples should always point outward, away from the tool body.
3. Staple Quality: Do not use damaged or bent staples.
4. Loading Practices: Avoid loading a single staple or overloading the magazine. Always load staples correctly.
5. Post-Use: Remove all staples from the magazine after use.

BATTERY CHARGING

 The battery gauge will light up in red when it is charged. The battery gauge will keep blinking in red and turn into green till it is fully charged.

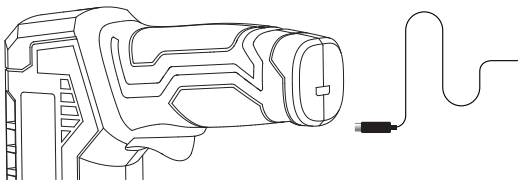

Maintenance

GENERAL MAINTENANCE GUIDELINES

1. **Tool Care:** Regularly clean the tool to ensure optimal performance. Always disconnect the tool from the power source and/or remove the battery pack before cleaning.
2. **Accessory Note:** This product does not include accessories. Avoid disassembling the tool.
3. **Professional Service:** All repairs and maintenance should be conducted by qualified technicians or authorized service centers.
4. **Cleaning Methods:** Use a long-haired brush, vacuum, or air compressor to remove dust. Wipe the exterior with a dry, clean, lint-free cloth.
5. **Cleaning Agents:** Avoid using corrosive chemicals, abrasive cleaners, alcohol, gasoline, or other liquid cleaners.

CLEARING JAMMED STAPLES

1. Power Off: Ensure the tool is switched to the Off-position.
2. Magazine Removal: Carefully pull out the magazine.
3. Staple Removal: Remove all staples from the magazine.
4. Tool Assistance: If necessary, use needle-nose pliers to remove any jammed staples.

Trouble Shooting

Trouble	Troubleshooting
Jam	<ul style="list-style-type: none">● Staple size is correct or not;● Power on or not;● Operating properly or not
Cannot be charged	<ul style="list-style-type: none">● Charging cord is correct or not
Battery damaged	<ul style="list-style-type: none">● Contact manufacturer or authorized service agent to repair.
Tool does not work	<ul style="list-style-type: none">● Charge the tool.
Staples do not fully penetrate into work-piece	<ul style="list-style-type: none">● Work-piece is too hard;● Contact bracket is not firmly against work-piece.
Staples are bended after driving	<ul style="list-style-type: none">● Work-piece is too hard;● Contact bracket is not firmly against work-piece.

Warranty Information

WOODSTARTER offers a one-year warranty along with lifetime technical support to ensure your satisfaction.

For any inquiries or feedback, please contact our team at [**support@woodstarter.com**](mailto:support@woodstarter.com) or visit our support page at [**www.woodstarter.com**](http://www.woodstarter.com) for assistance.



WOODSTARTER

EMPOWERING
YOUR WOODWORKING JOURNEY

If you need any assistance, please contact us via:

✉ Email: support@woodstarter.com



www.woodstarter.com

2330 Paseo Del Prado, C303,
Las Vegas, NV 89102

MADE IN CHINA

